

## CX series-FAQ

# How to setup feed-in limitation settings for CX inverters

Applicable to SGxxCX-series

For SG30-50CX, SG100\_110CX, the energy meter should be connected with the Sungrow data logger and the feed-in setting is carried out at the data logger. See the User Manual of [Data Logger](#) ([find manual for SUNGROW Logger1000 here](#)) for detailed setting methods.

The energy meter must be connected as close as possible to the grid connection point in order to measure all the power truly injected in the grid.

For further information, please download the user manual for:

[SG30/50CX](#)  
[SG110CX](#)

This manual is intended for professional technicians who are responsible for installation, operation, maintenance and troubleshooting of inverters, and users who need to check inverter parameters. The inverter must only be installed by professional technicians.

The professional technician is required to meet the following requirements:

- Know electronic, electrical wiring and mechanical expertise, and be familiar with electrical and mechanical schematics.
- Have received professional training related to the installation, commissioning and troubleshooting of electrical equipment.
- Be able to quickly respond to hazards or emergencies that occur during installation, commissioning and troubleshooting.
- Be familiar with local standards and relevant safety regulations of electrical systems.
- Read this manual thoroughly and understand the safety instructions related to operations.