


1-phase Hybrids-FAQ

How to set Grid Code for a country

Applicable to: SHxxRS series


1. Local settings:

Enter **Settings** and select the country by **More-Setting-System Parameters-Country/Region**.

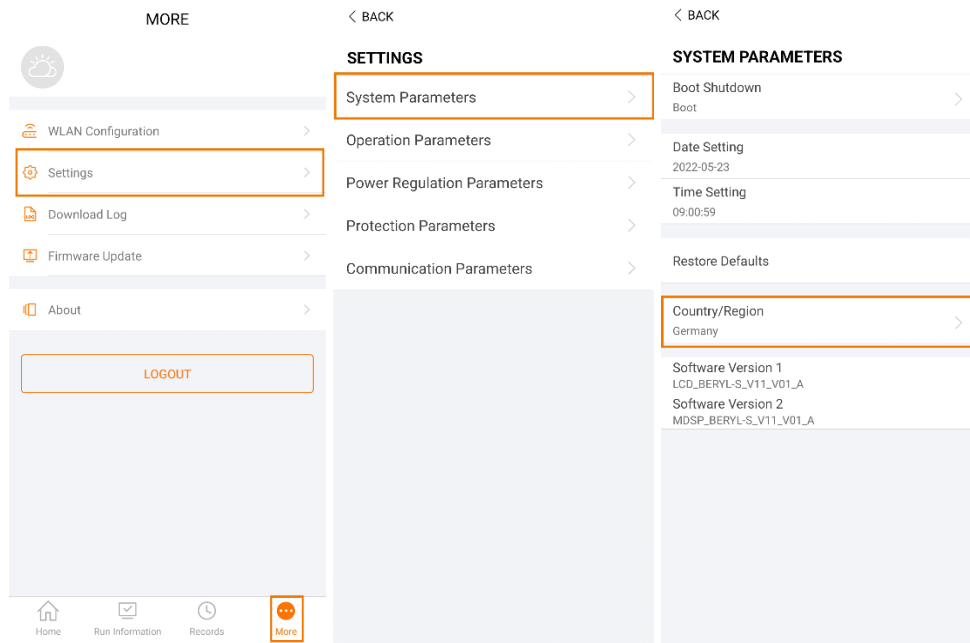


2. iSolarCloud remote setting:

2.1 Enter **Settings**, select the device and enter the **Initialization Settings**.

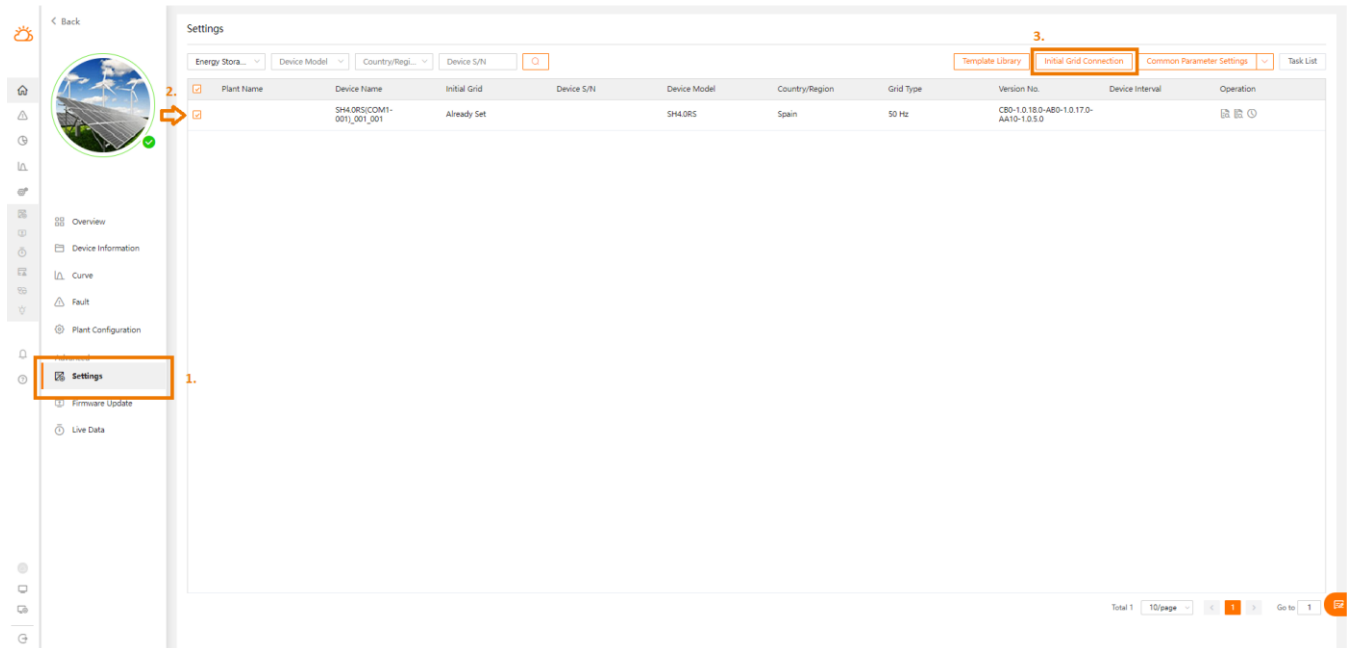

2.2 Select the **country** and click “**Apply Settings**”.

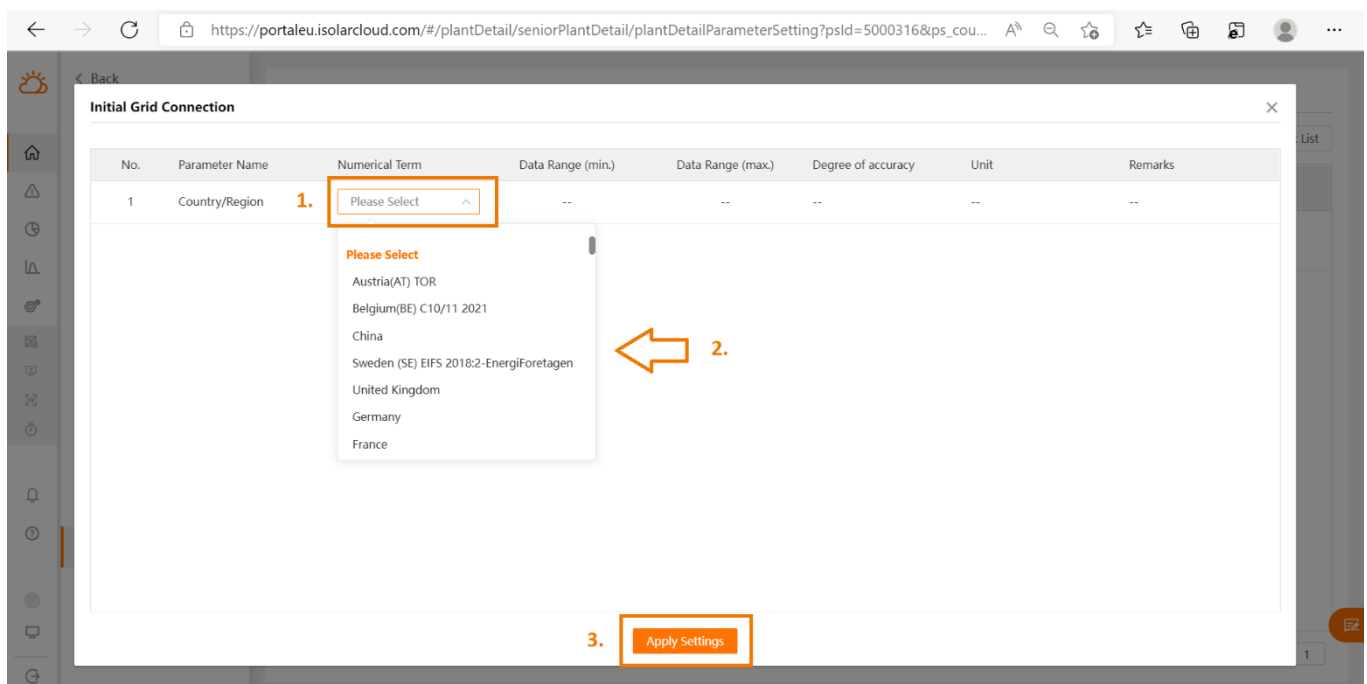

For some specific countries, it is required to perform additional manual settings. Follow the separate manual settings guideline. Enter the correct settings in the **Common Parameters – Power control**.

For further information, please download the user manual [here](#).

© 2021 Sungrow. All rights reserved. Subject to change without notice. Version 1.1

Sungrow Deutschland GmbH | Balanstr. 59 | 81541 München | www.sungrowpower.com

This manual is intended for professional technicians who are responsible for installation, operation, maintenance and troubleshooting of inverters, and users who need to check inverter parameters. The inverter must only be installed by professional technicians.

The professional technician is required to meet the following requirements:

- Know electronic, electrical wiring and mechanical expertise, and be familiar with electrical and mechanical schematics.
- Have received professional training related to the installation, commissioning and troubleshooting of electrical equipment.
- Be able to quickly respond to hazards or emergencies that occur during installation, commissioning and troubleshooting.
- Be familiar with local standards and relevant safety regulations of electrical systems.
- Read this manual thoroughly and understand the safety instructions related to operations.