


## iSolarCloud FAQ


# How to set parameters on iSolarCloud-App

Applicable to: iSolarCloud


1. Log in to iSolarCloud App and find the plant for parameter settings.
2. Click **Device** (as shown below) to enter the device list. Choose the inverter and find **Settings** by sliding left and right to enter the inverter parameter settings.

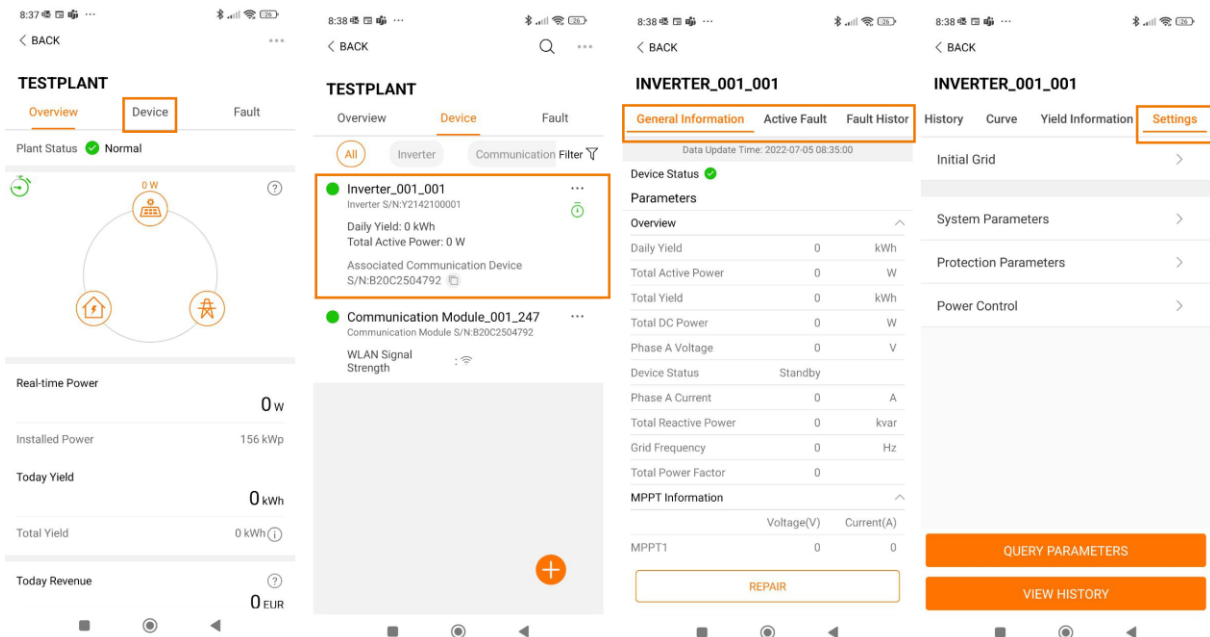


3. Click **Initial Grid** to enter the initialization settings.

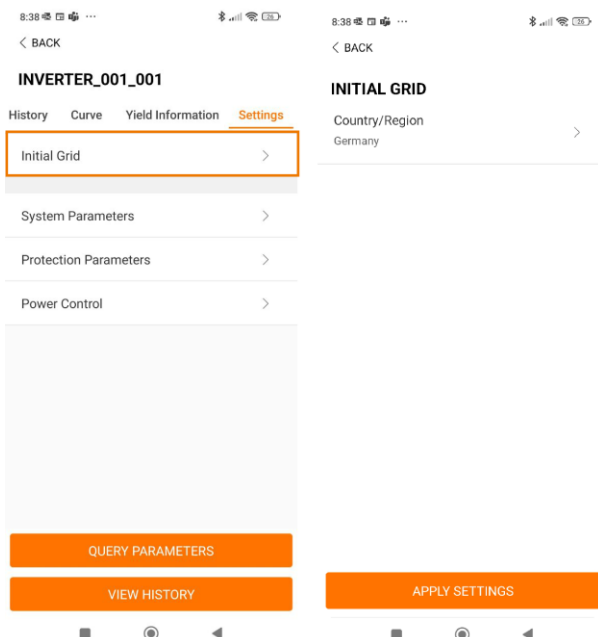


4. Click **System Parameters** to enter the system parameter settings.

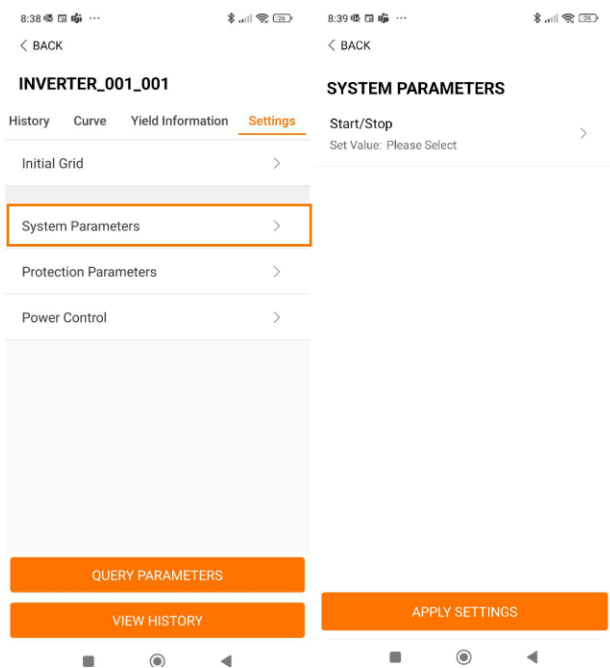

5. Click **Protection Parameters** to enter the protection parameter settings.

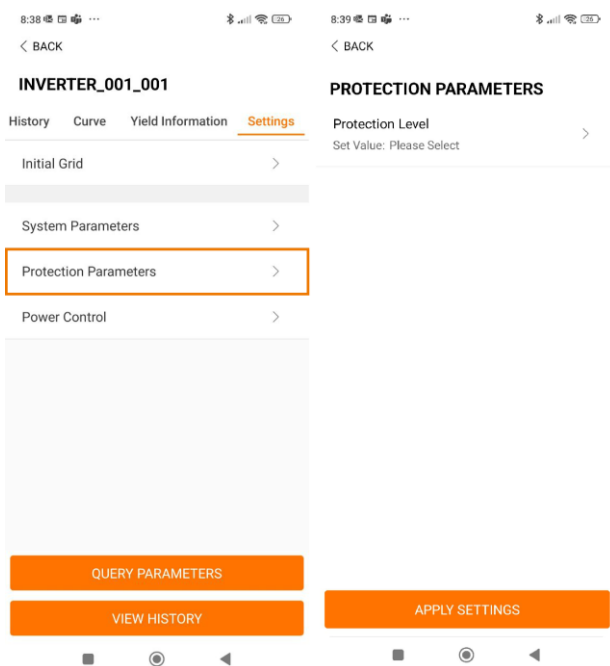

6. Click **Power Control** to enter the power control settings.

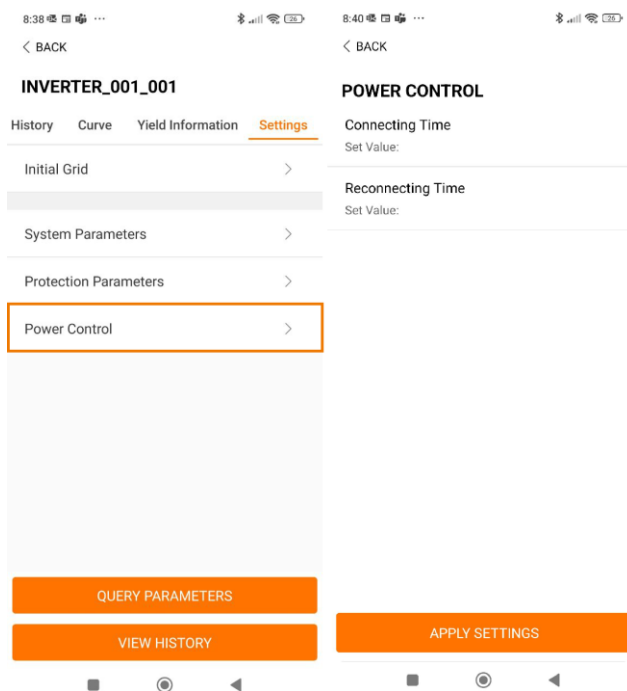

7. If there are any further device or customer specific settings, these also must be set.

For further information, please download the user manual [here](#).



iSolarCloud App

This manual is intended for professional technicians who are responsible for installation, operation, maintenance and troubleshooting of inverters, and users who need to check inverter parameters. The inverter must only be installed by professional technicians.

The professional technician is required to meet the following requirements:

- Know electronic, electrical wiring and mechanical expertise, and be familiar with electrical and mechanical schematics.
- Have received professional training related to the installation, commissioning and troubleshooting of electrical equipment.
- Be able to quickly respond to hazards or emergencies that occur during installation, commissioning and troubleshooting.
- Be familiar with local standards and relevant safety regulations of electrical systems.
- Read this manual thoroughly and understand the safety instructions related to operations.