


iSolarCloud FAQ


How to set parameters on iSolarCloud-Web interface

Applicable to: iSolarCloud



1. Log in to iSolarCloud Europe: <https://www.isolarcloud.eu>

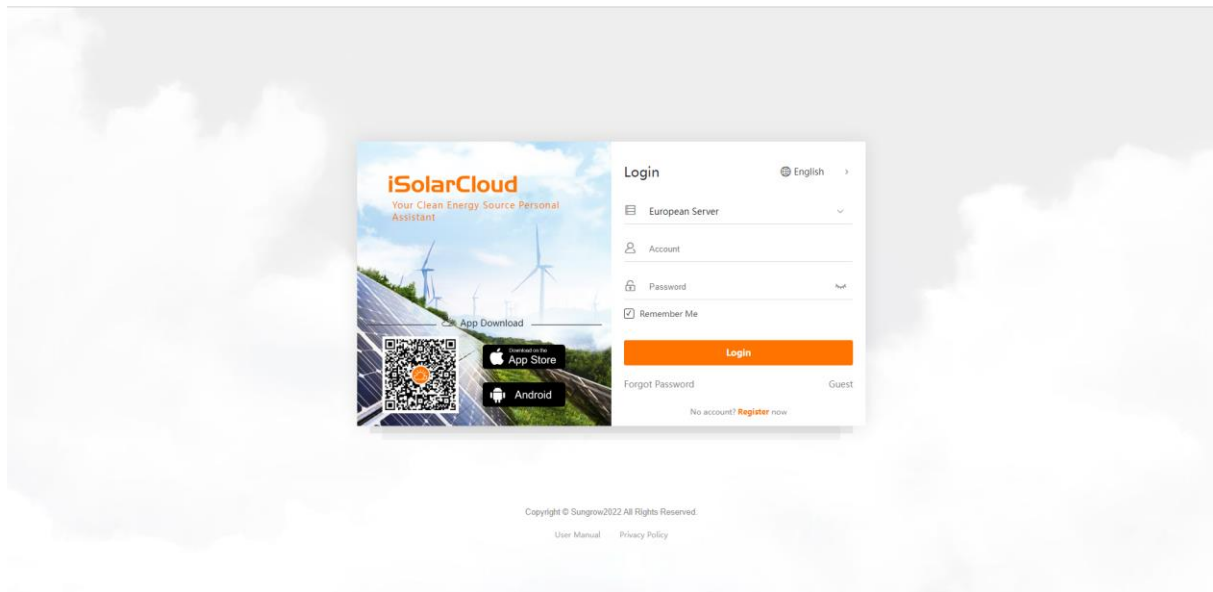



2. Choose your plant and click **Settings** to enter parameter settings

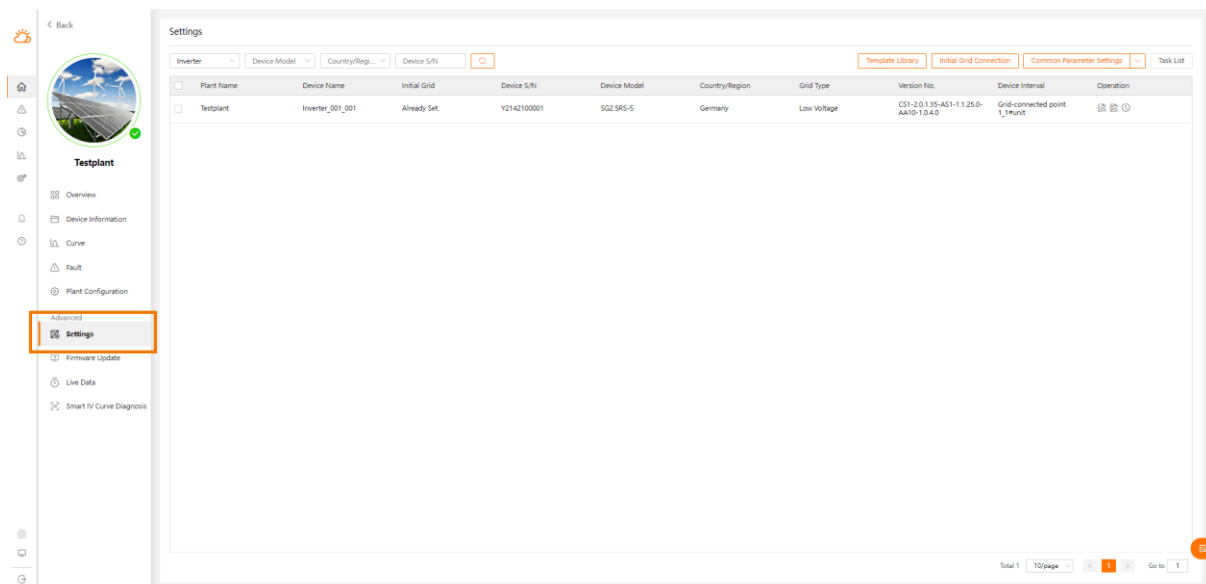



3. Choose the inverter and set **Initial Grid Connection**. Choose the right Country in the next step and **Apply Settings**. If there are any further device or customer specific settings, these also must be set.

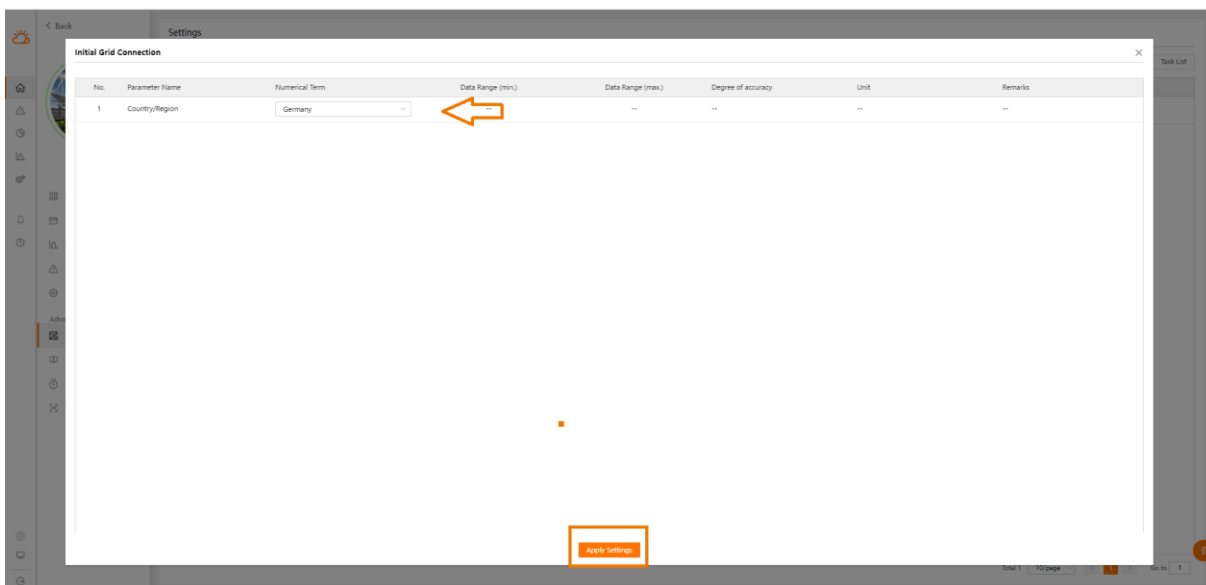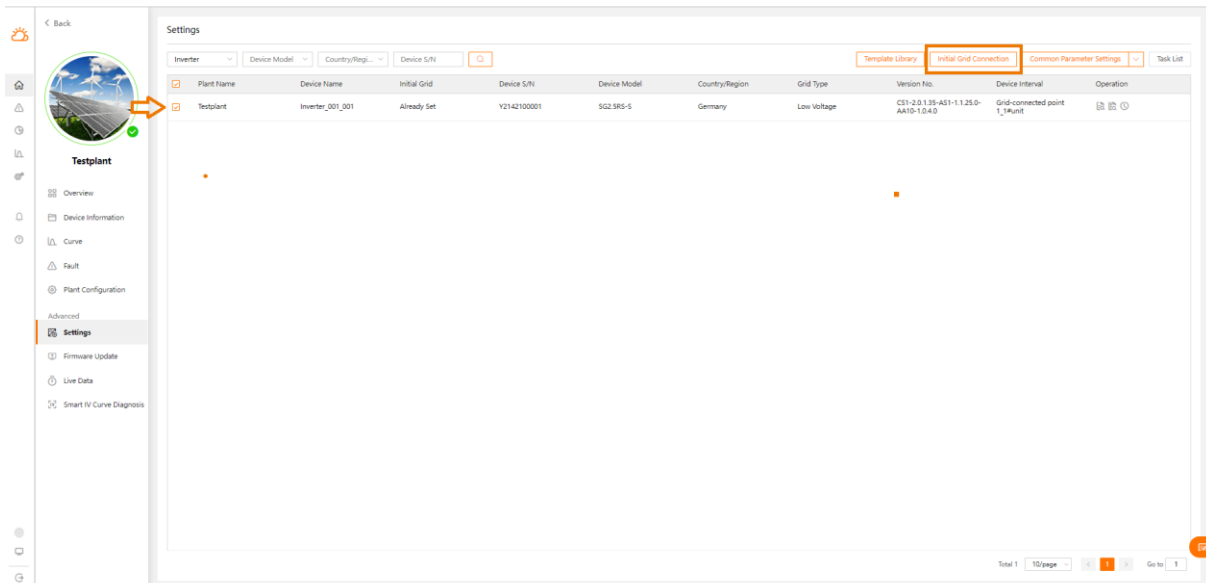

4. Choose the inverter and click **Common Parameter Settings** to find those.

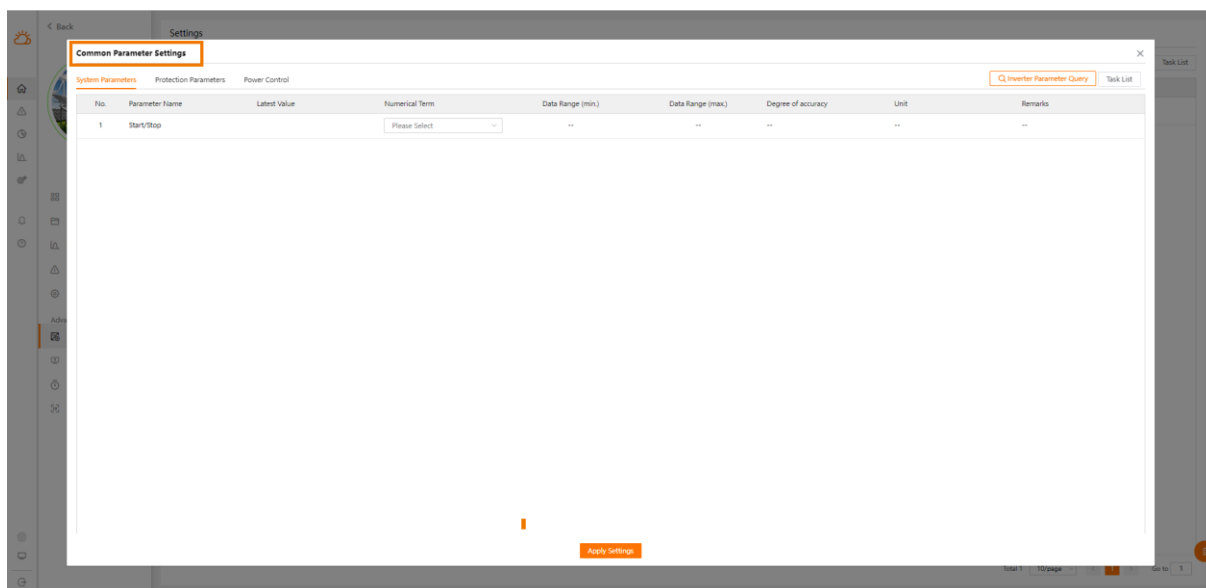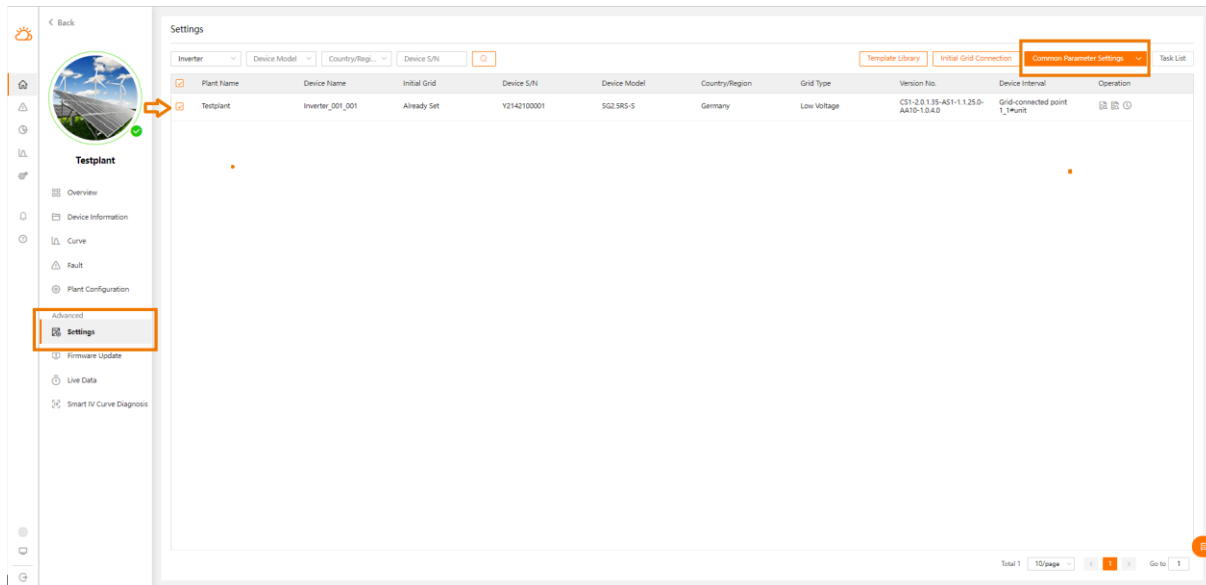

5. Choose the inverter and click **Advanced Parameter Settings** to find those.

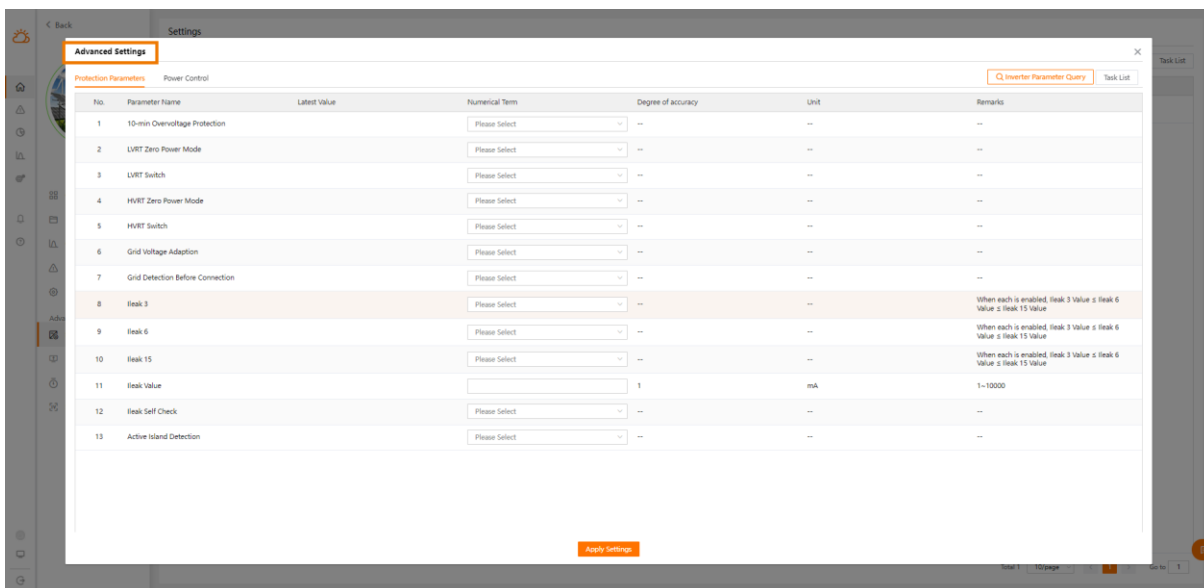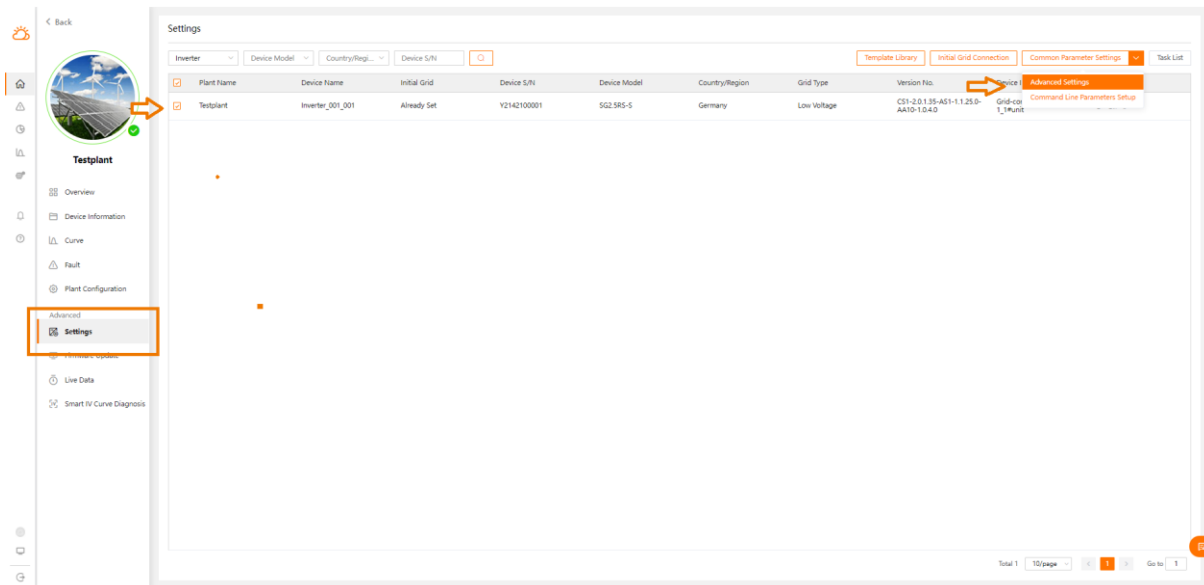

A detailed description of the parameters of a certain device, can be found in separated documents.

For further information, please download the user manual [here](#).



iSolarCloud App

This manual is intended for professional technicians who are responsible for installation, operation, maintenance and troubleshooting of inverters, and users who need to check inverter parameters. The inverter must only be installed by professional technicians.

The professional technician is required to meet the following requirements:

- Know electronic, electrical wiring and mechanical expertise, and be familiar with electrical and mechanical schematics.
- Have received professional training related to the installation, commissioning and troubleshooting of electrical equipment.
- Be able to quickly respond to hazards or emergencies that occur during installation, commissioning and troubleshooting.
- Be familiar with local standards and relevant safety regulations of electrical systems.
- Read this manual thoroughly and understand the safety instructions related to operations.