


iSolarCloud FAQ


How to subscribe alarms

Applicable to: iSolarCloud


To subscribe alarms for a certain plant, navigate on the left side through **Advanced** to **Alarm Subscribe**.

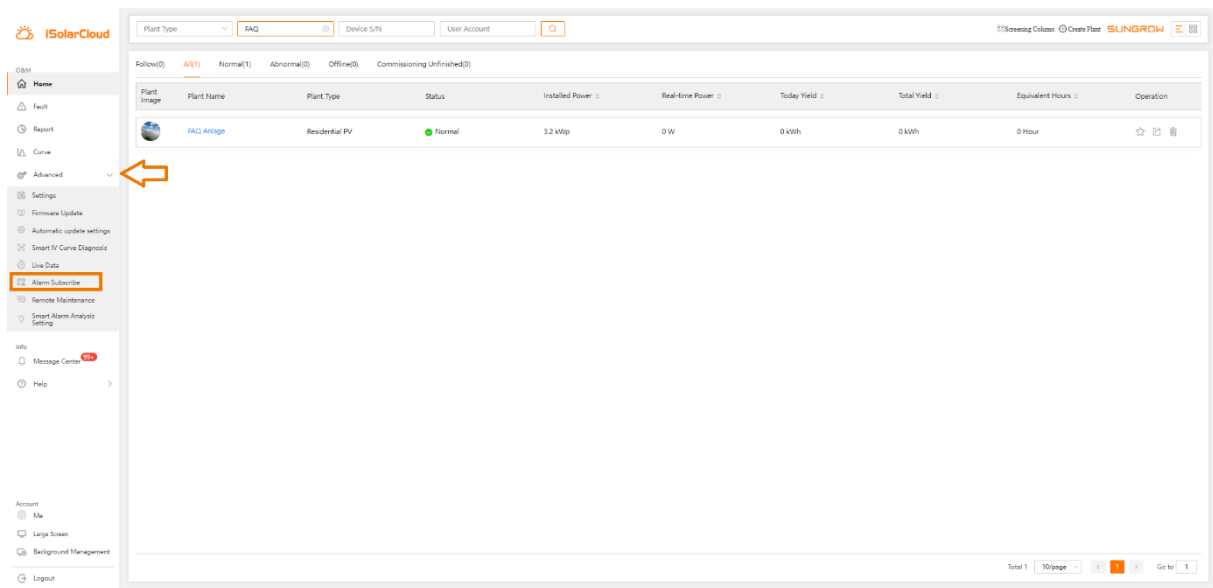


Choose **+Add** for new subscription.

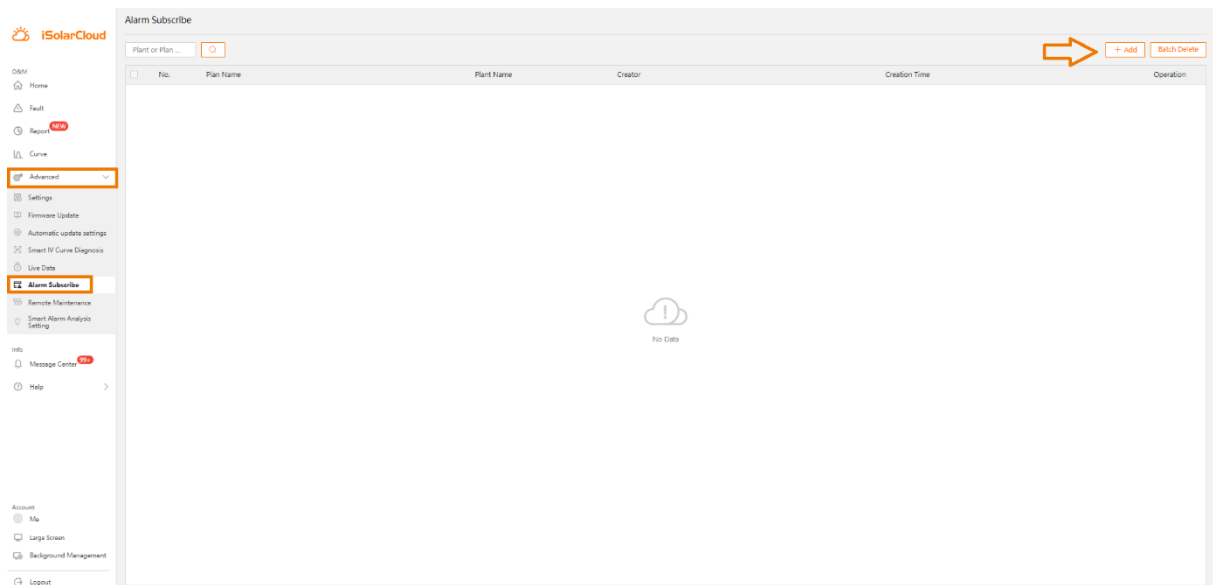


Click the **Select plant** column and another window will pop up.

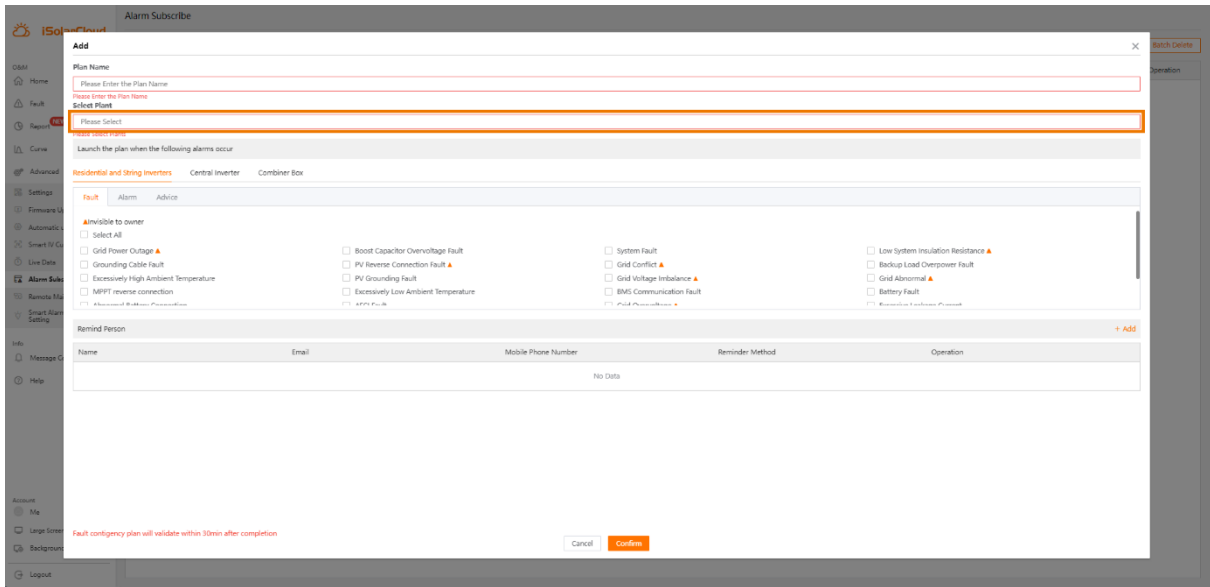


Search the plant by typing the plant name (1.) and clicking the magnifier (2.). After you chose your plant (3.), it appears on the right side (4.). Click **Confirm** (5.).

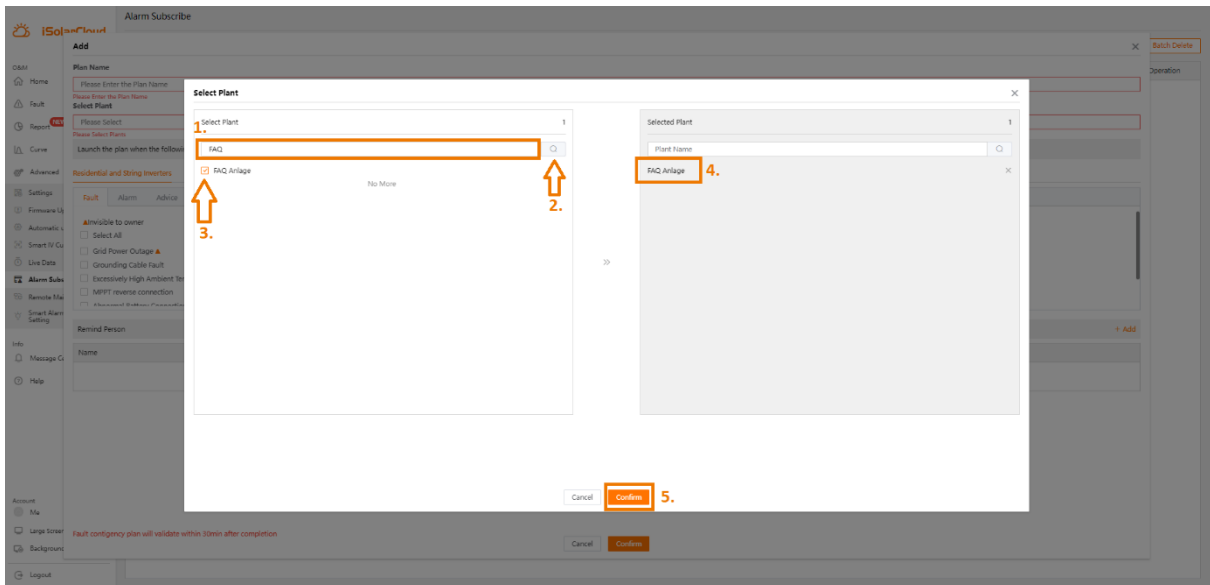

Select the desired alarms and click **+Add** a person to receive those alarms.

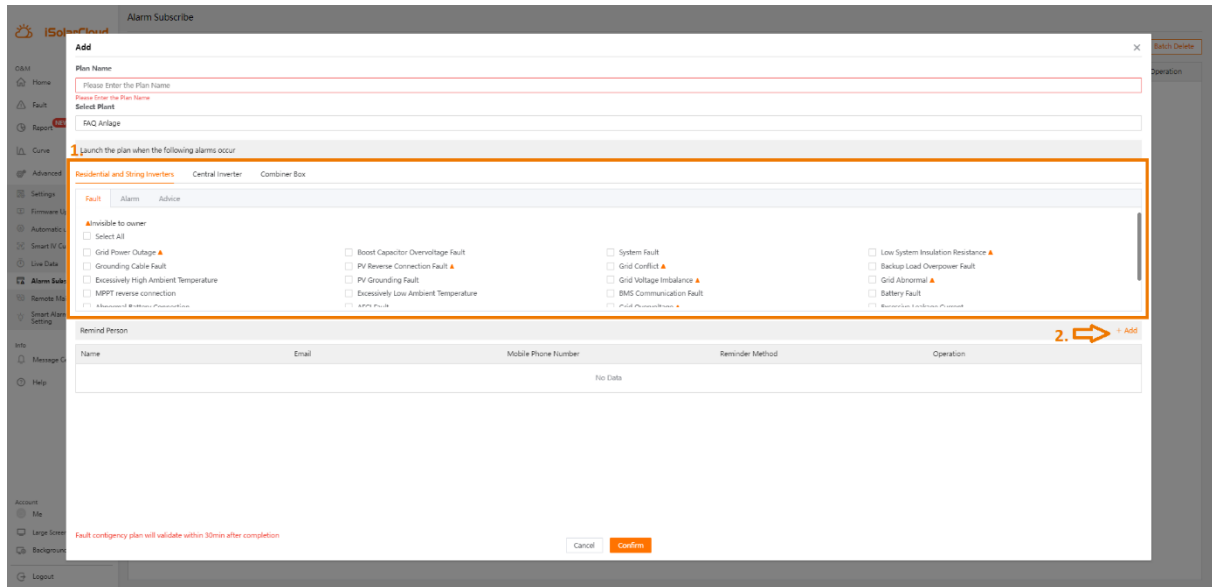

Insert your details and click **Send** to receive an email with your verification code. Insert your verification Code and click **Confirm**.

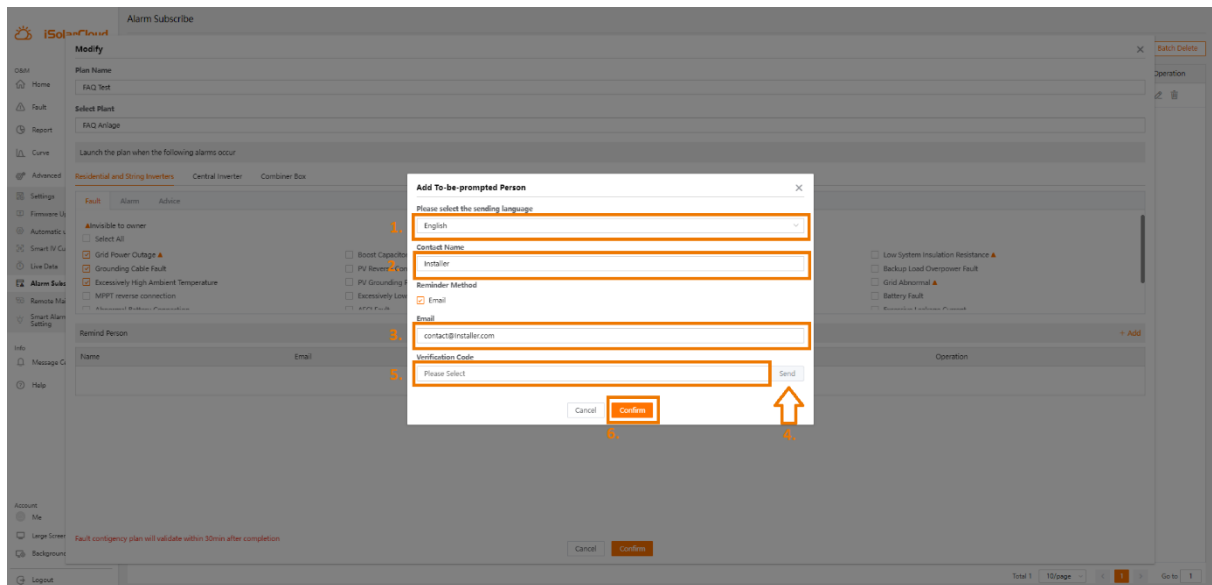

When all mandatory columns are filled in, you can click **Confirm** and check your subscriptions on the next page.

For further information, please download the user manual [here](#).

This manual is intended for professional technicians who are responsible for installation, operation, maintenance and troubleshooting of inverters, and users who need to check inverter parameters. The inverter must only be installed by professional technicians.

The professional technician is required to meet the following requirements:

- Know electronic, electrical wiring and mechanical expertise, and be familiar with electrical and mechanical schematics.
- Have received professional training related to the installation, commissioning and troubleshooting of electrical equipment.
- Be able to quickly respond to hazards or emergencies that occur during installation, commissioning and troubleshooting.
- Be familiar with local standards and relevant safety regulations of electrical systems.
- Read this manual thoroughly and understand the safety instructions related to operations.